




**Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724**

**Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 1724 prise 12-N**


**Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724**

**Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlg. DIN/ISO norm 1724**



**Instrucciones de montaje de
kit eléctrico para enganche de
remolque con caja de conexiones
12-N según norma DIN/ISO 1724**

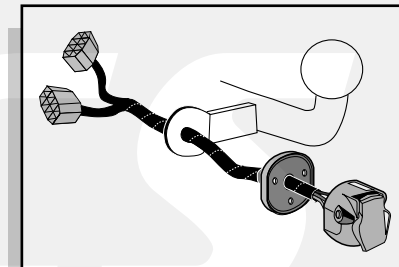


Volkswagen Golf IV hb 1997- / Bora sdn 10/98-

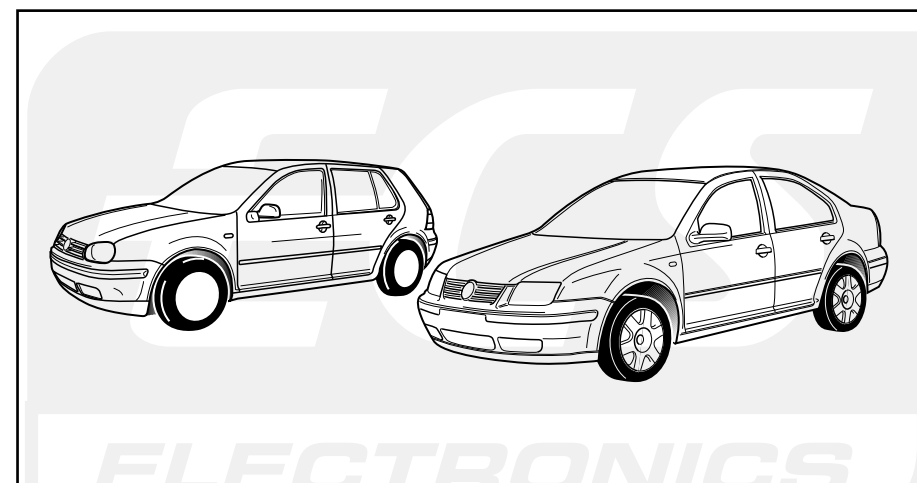

Bestel Nr.: VW-005-BB

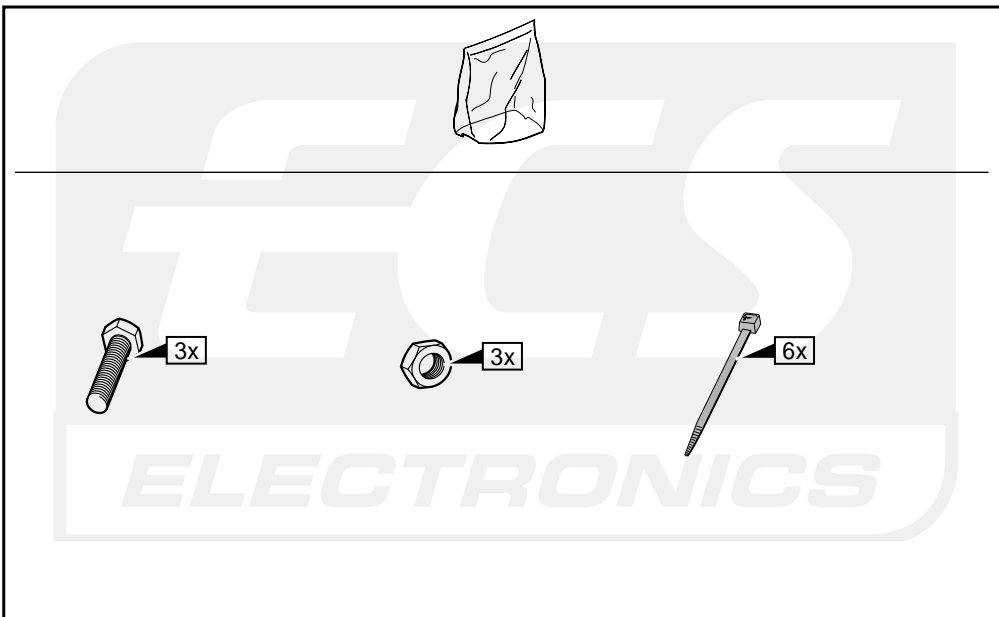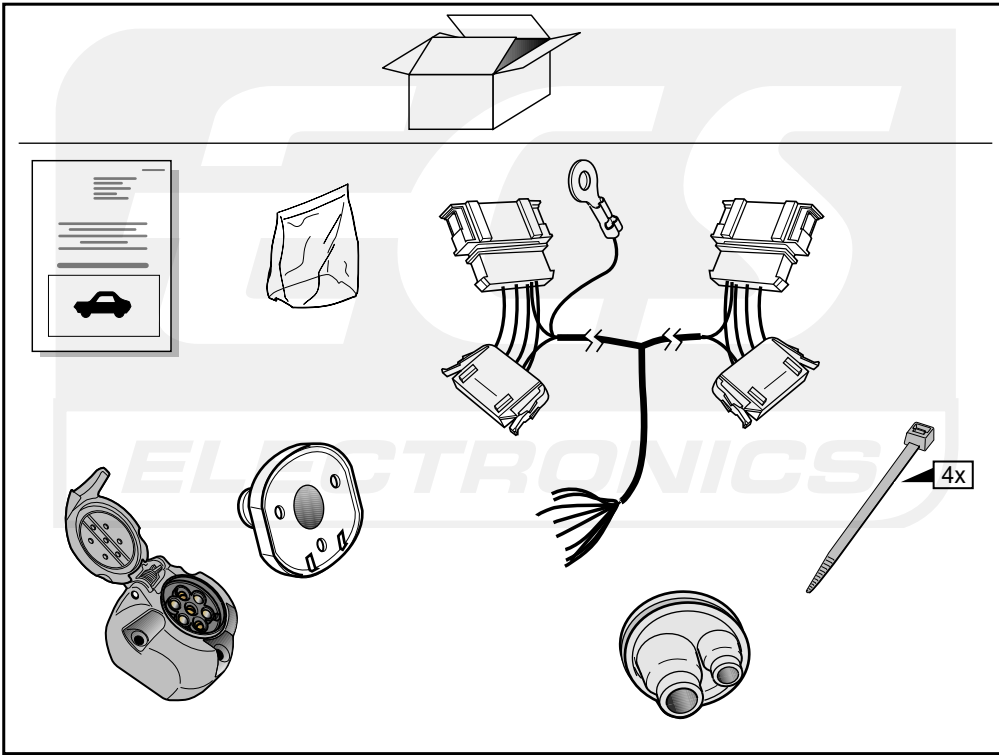

28

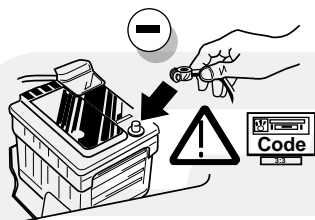

29


! **CONTROLEER FUNCTIES !**
CHECK FUNCTIONS !
FUNKTIONEN KONTROLIEREN !
CONTRÔLER LES FONCTIONS !
¡CONTROLAR LAS FUNCIONES!

INFO


* VW Golf IV HB 1997-:
 Fig. 1 t/m 16

*VW Bora SEDAN 10/1998-:
 Fig. 17 t/m 32


1 VW Golf IV Hatchback 1997-

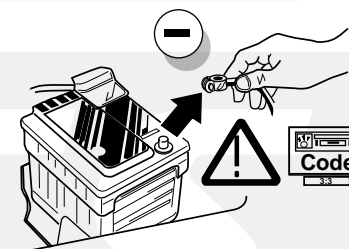


30

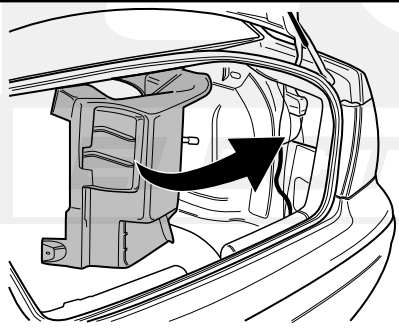


31

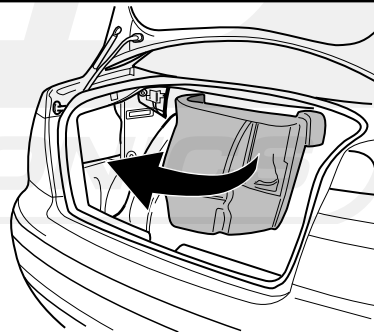


2

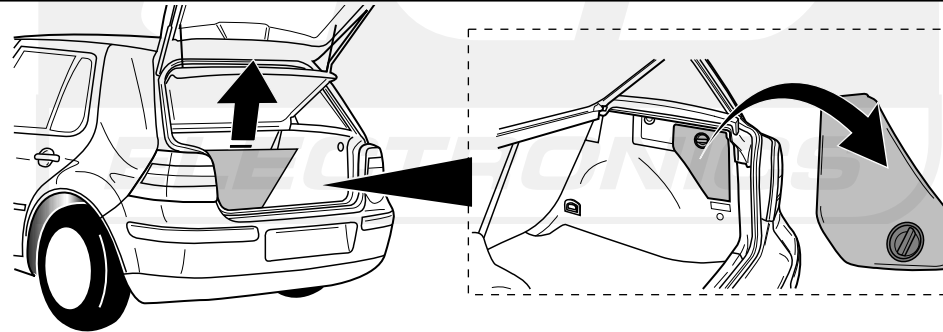


32





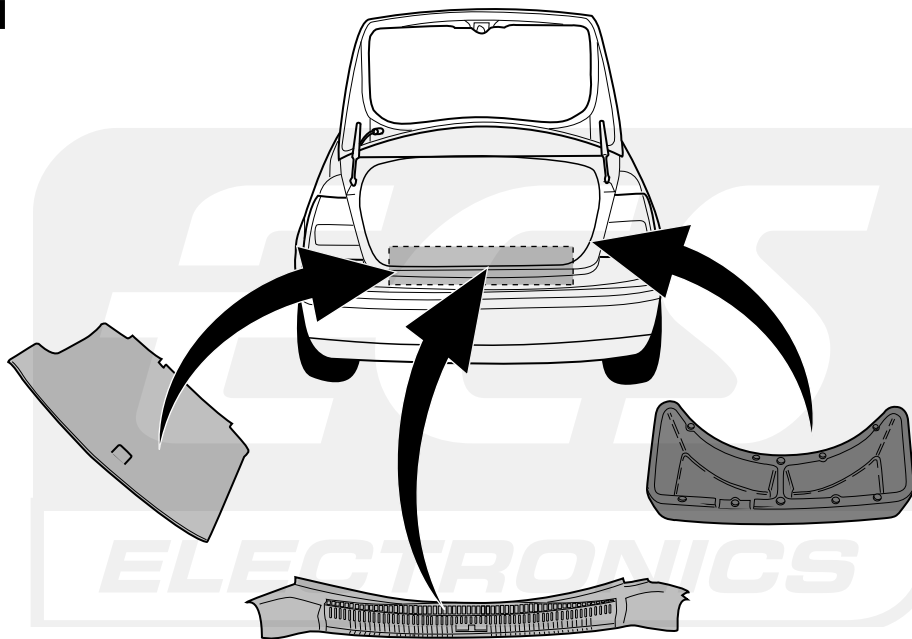


3

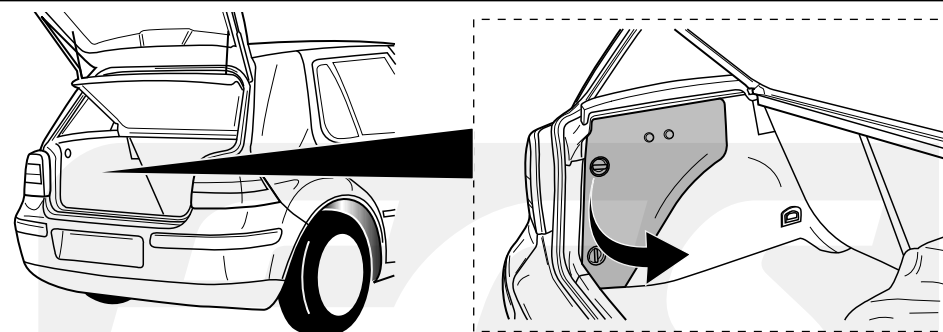





4





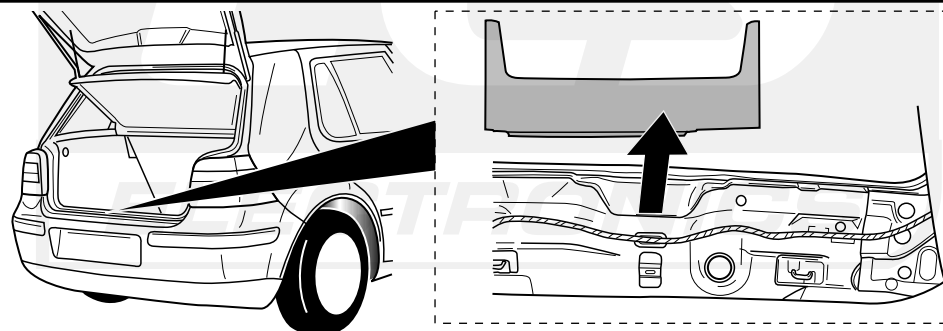


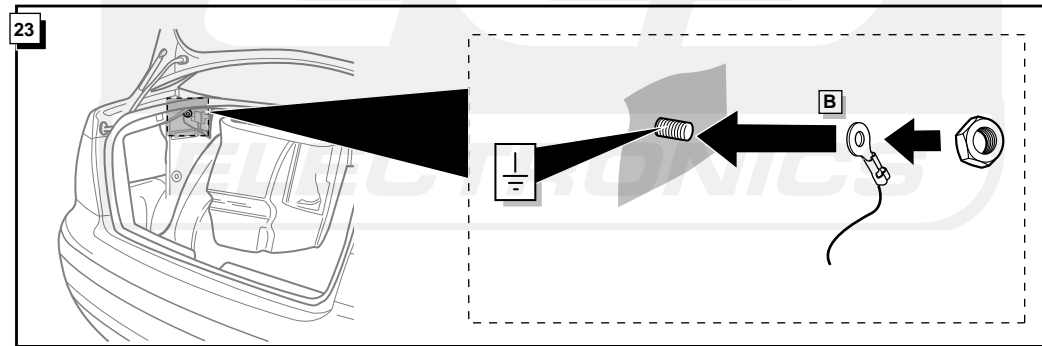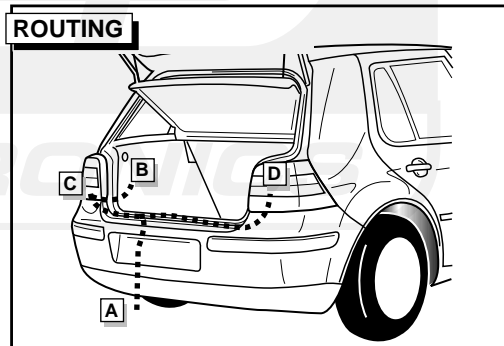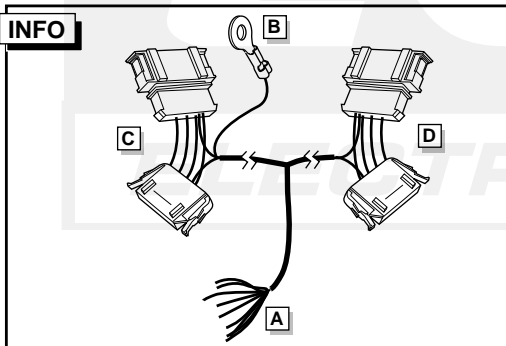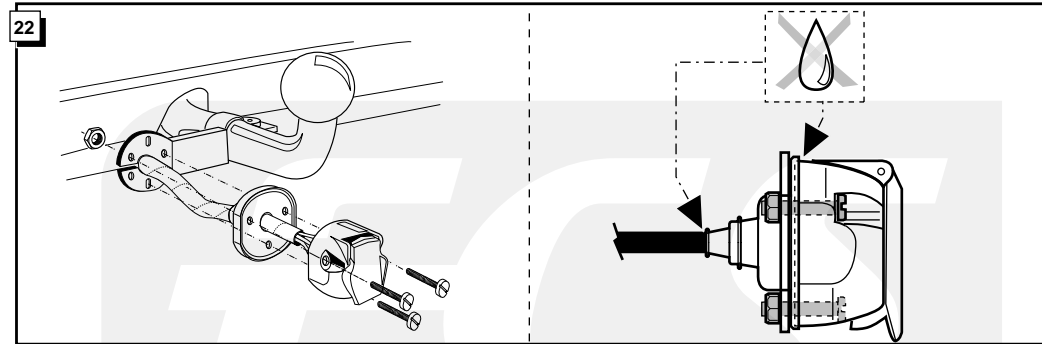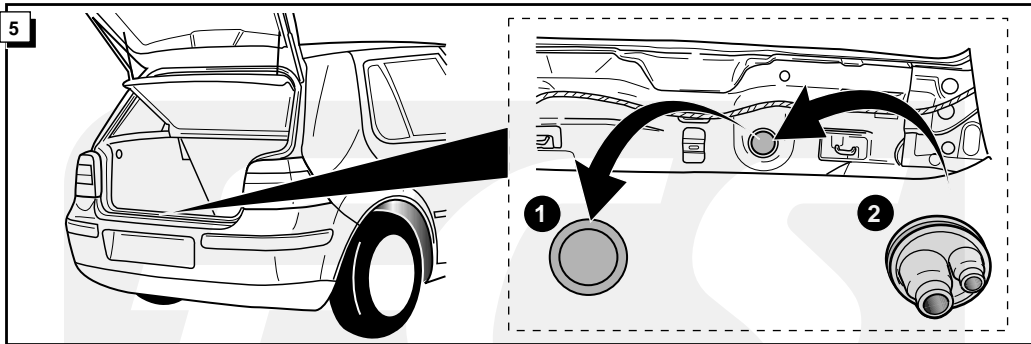

INFO **Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting / Conexiones del enchufe**

DIN/ISO 1724		D	F	GB	NL	ES
←	1/L	gelb	jaune	yellow	geel	amarillo
↔	2	blau	bleu	blue	blauw	azul
⏏ 1-8	3/31	weiß	blanc	white	wit	blanco
→	4/R	grün	vert	green	groen	verde
☀	5/58-R	braun	marron	brown	bruin	marrón
STOP	6/54	rot	rouge	red	rood	rojo
☀	7/58-L	schwarz	noir	black	zwart	negro
⏏ → ↔ ← ⏏	8/58-b	grau	gris	grey	grijs	gris

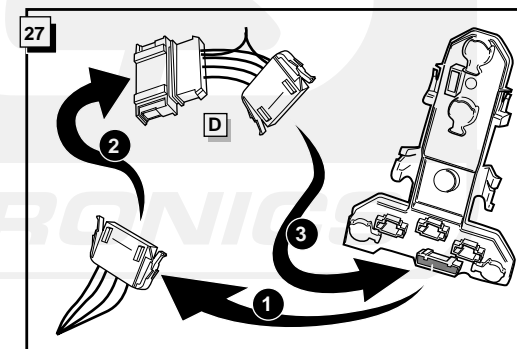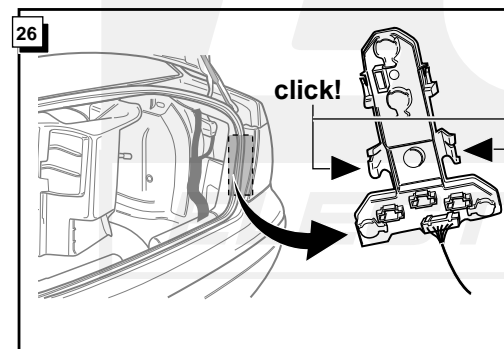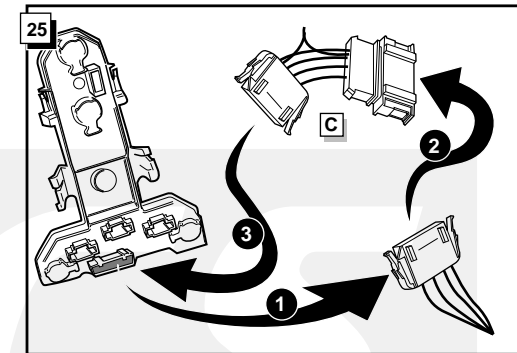
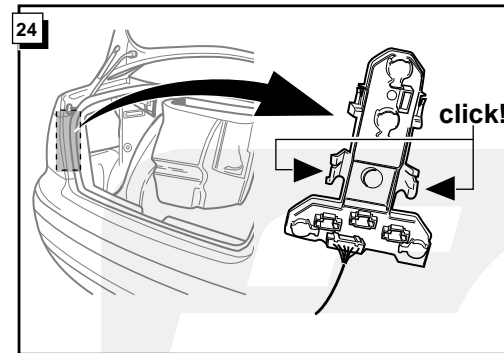


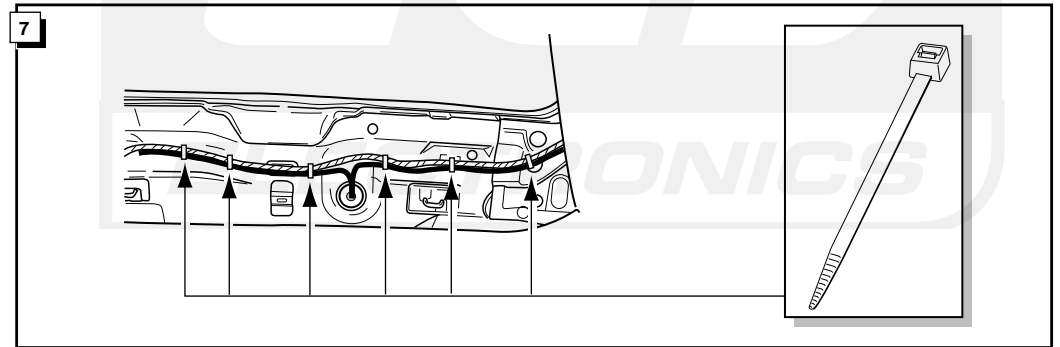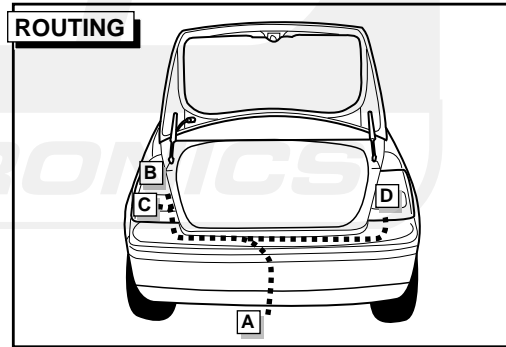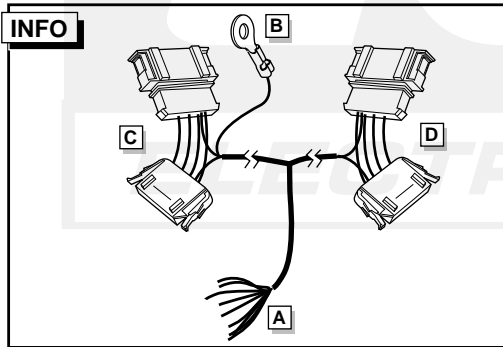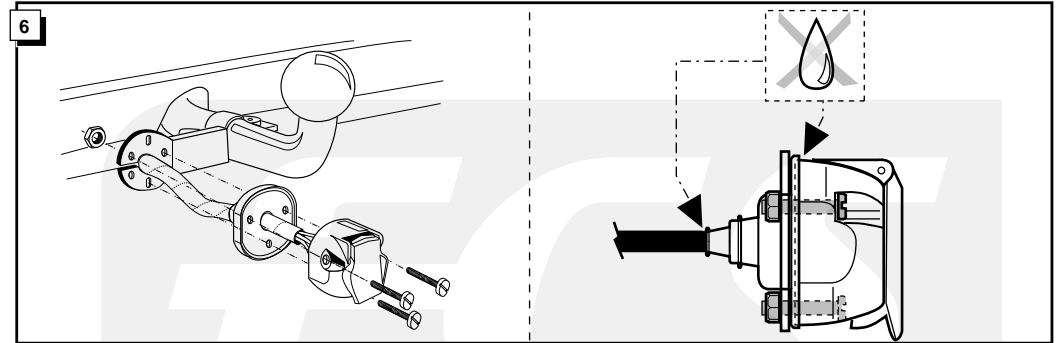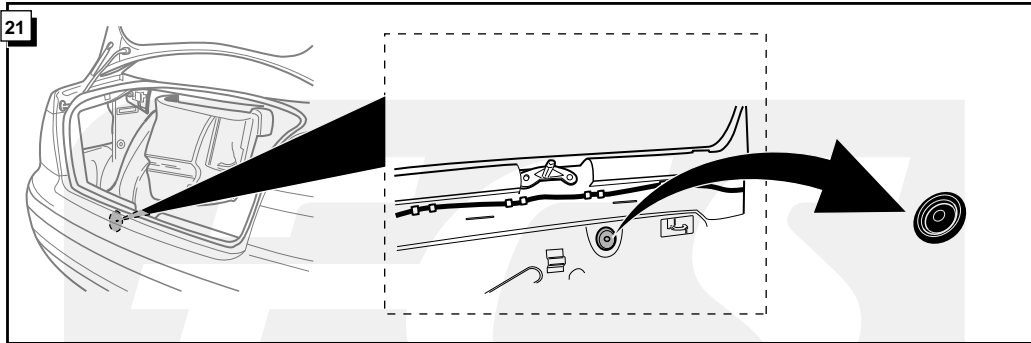




INFO

Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting / Conexiones del enchufe

DIN/ISO 1724		D	F	GB	NL	ES
	1/L	gelb	jaune	yellow	geel	amarillo
	2	blau	bleu	blue	blauw	azul
	3/31	weiß	blanc	white	wit	blanco
	4/R	grün	vert	green	groen	verde
	5/58-R	braun	marron	brown	bruin	marrón
	6/54	rot	rouge	red	rood	rojo
	7/58-L	schwarz	noir	black	zwart	negro
	8/58-b	grau	gris	grey	grijs	gris

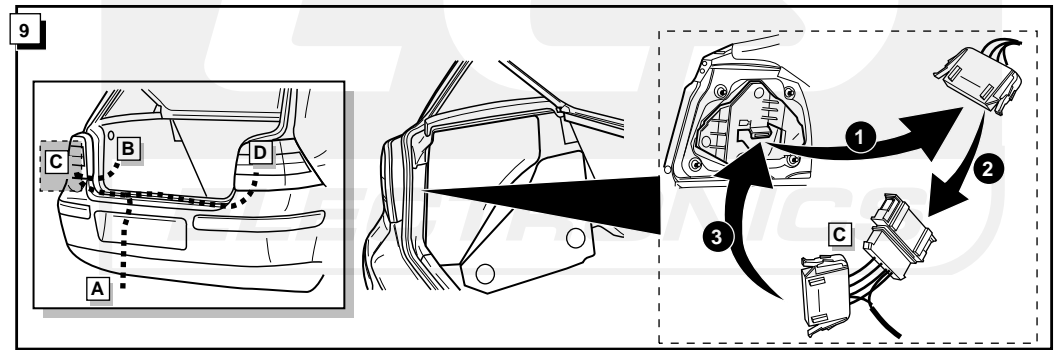
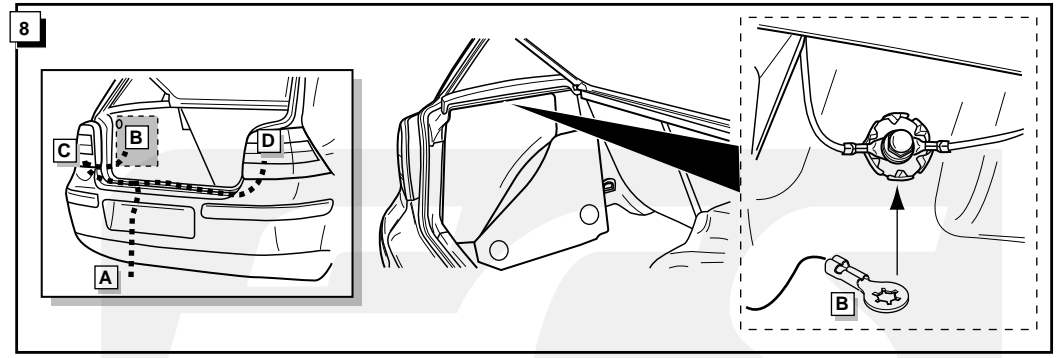


10

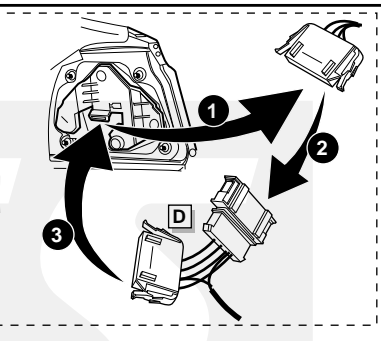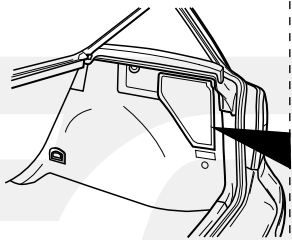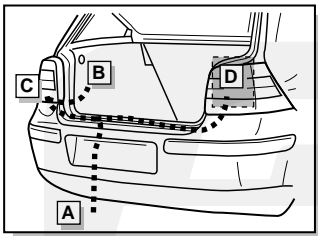


17

VW Bora Sedan 10/1998-

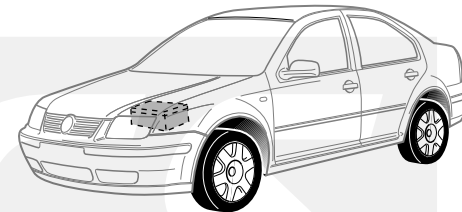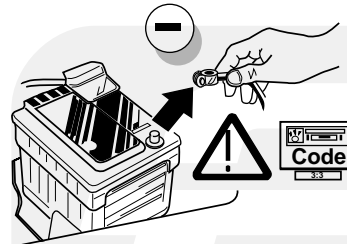


11

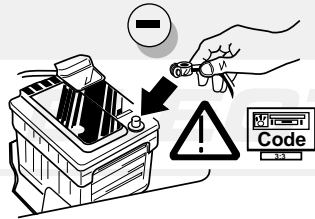


12

! CONTROLEER FUNCTIES !
! CHECK FUNCTIONS !
! FUNKTIONEN KONTROLIEREN !
! CONTRÔLER LES FONCTIONS !
! CONTROLAR LAS FUNCIONES!


18

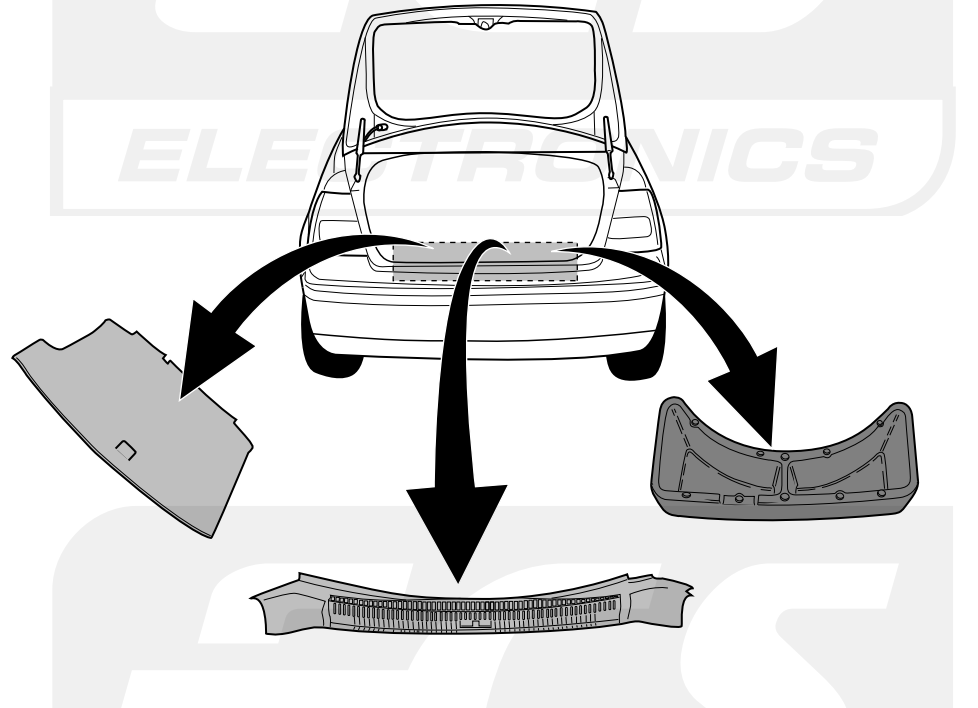


13

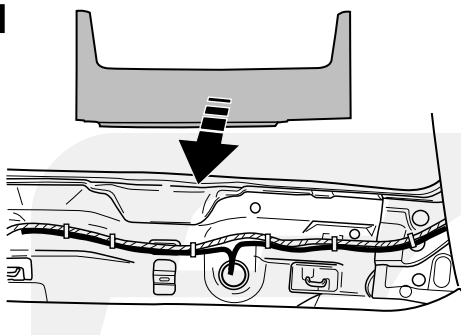


14

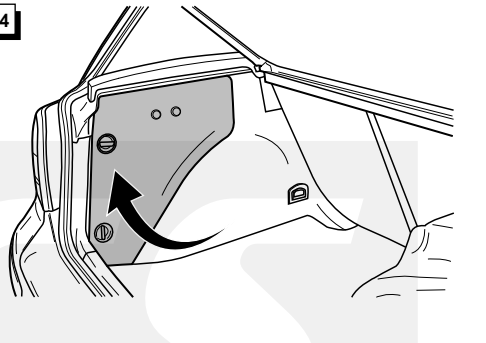


15

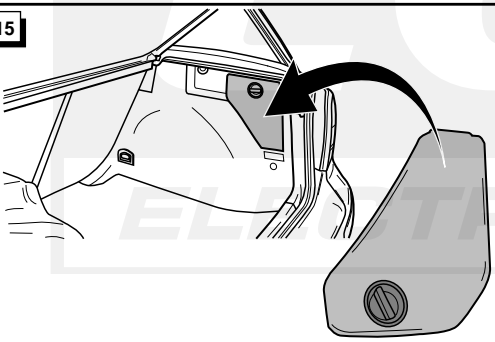

16

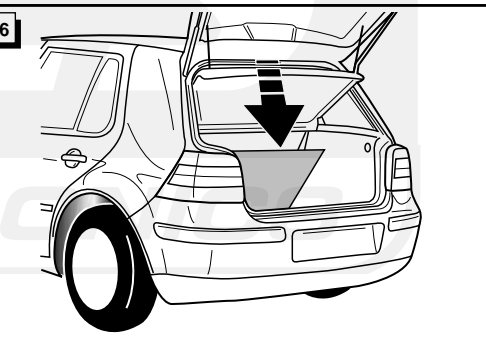

19

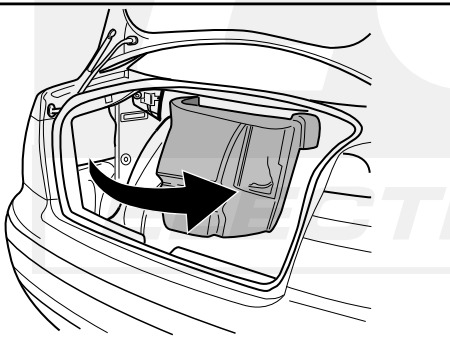

20

