



Einbauanleitung Elektrosatz Anhängervorrichtung  
mit 12-N Steckdose  
lt. DIN/ISO Norm 1724

CT-015-BB


010311DC

Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme  
DIN/ISO 1724 prise 12-N

Fitting instructions electric wiringkit  
towbar with 12-N socket up to  
DIN/ISO norm 1724


Montage-handleiding elektrokabelset voor trekhaak  
met 12-N contactdoos  
vlg. DIN/ISO norm 1724

Instrucciones de montaje de  
kit eléctrico para enganche de  
remolque con caja de conexiones  
12-N según norma DIN/ISO 1724

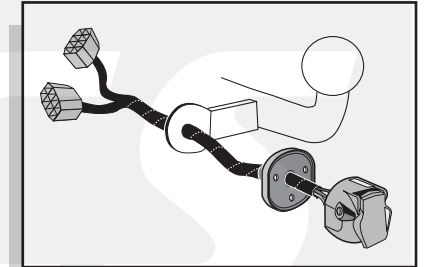








Peugeot 807 03/2002-  
Citroën C8 03/2002-






Fiat Ulysse 03/2002-  
Lancia Phedra 03/2002-




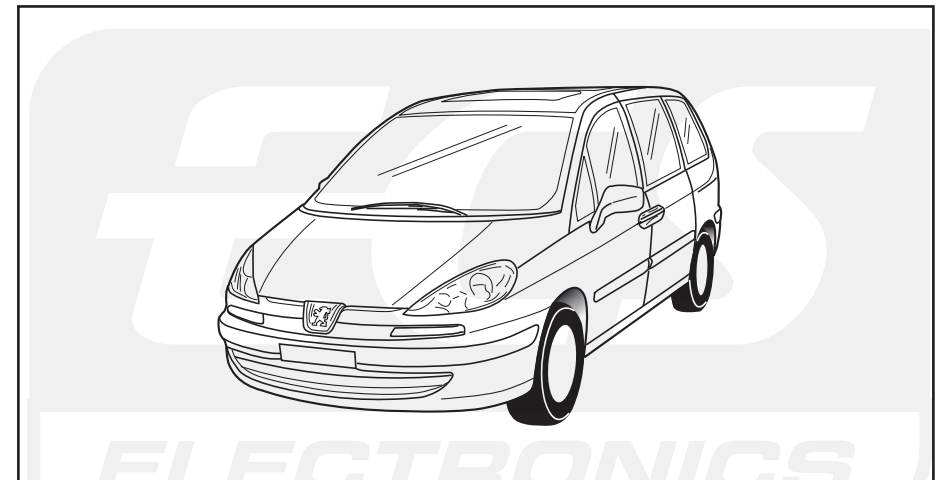





Bestel Nr.: CT-015-BB

\* Einzelteilliste \* Liste de pieces \* Part list \* Onderdelenlijst \* Lista de piezas

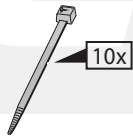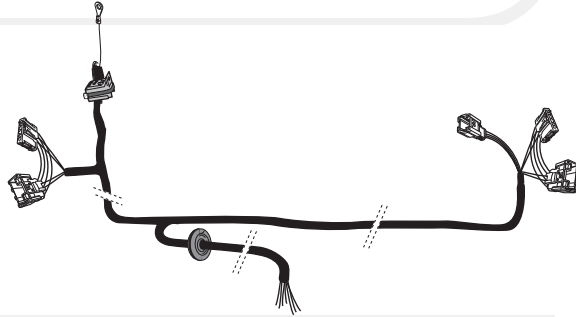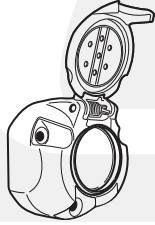

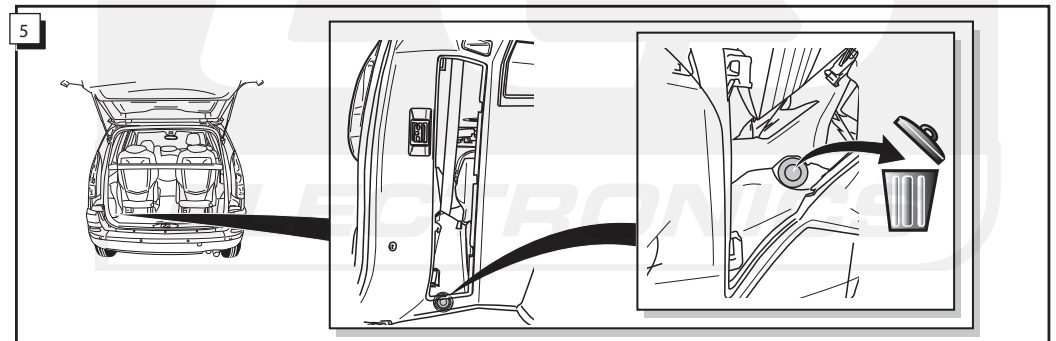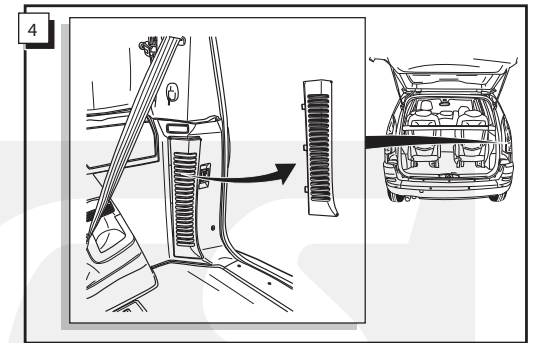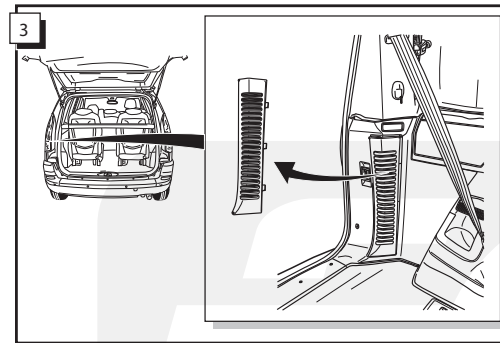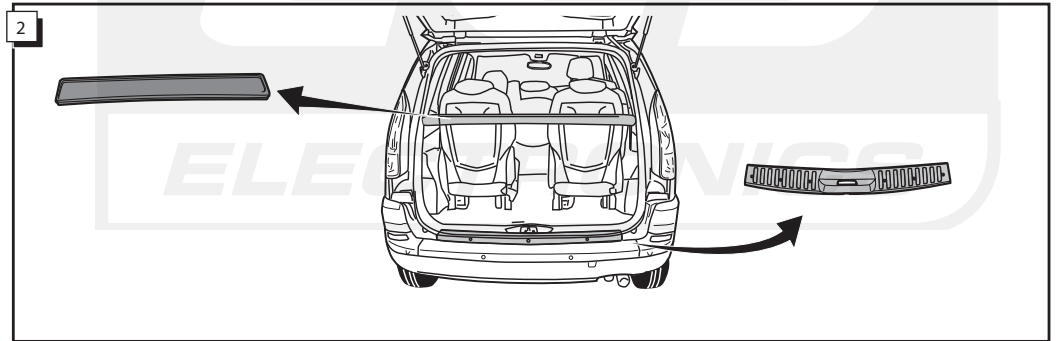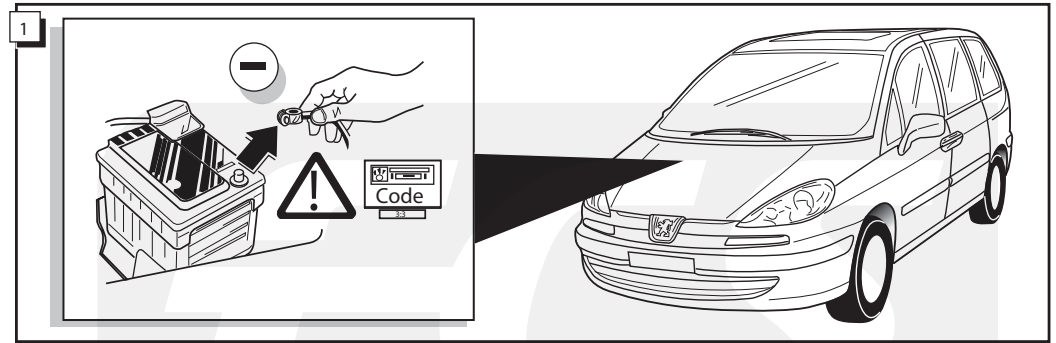

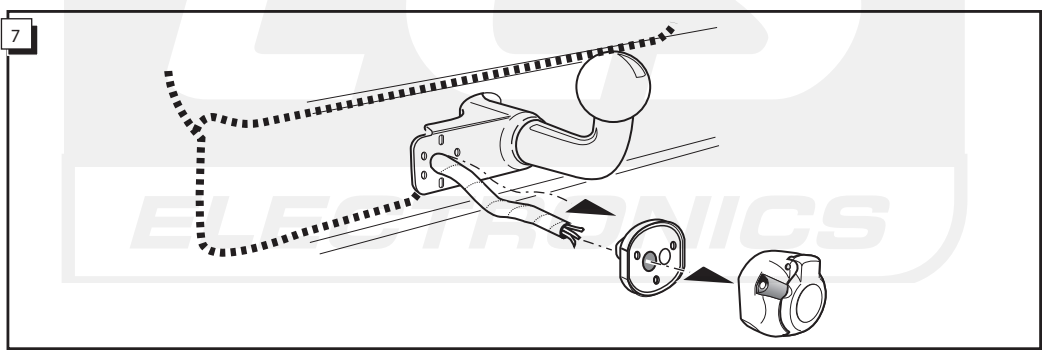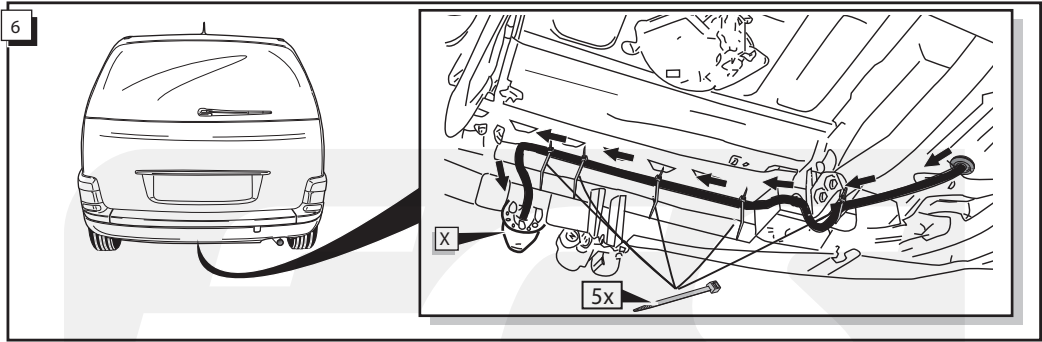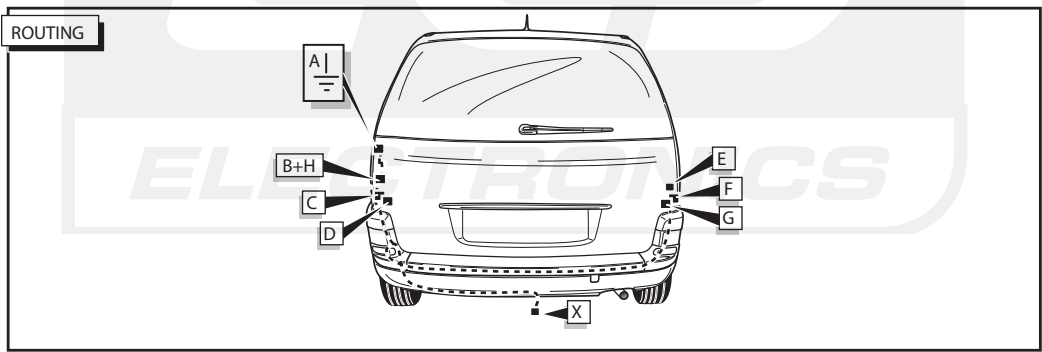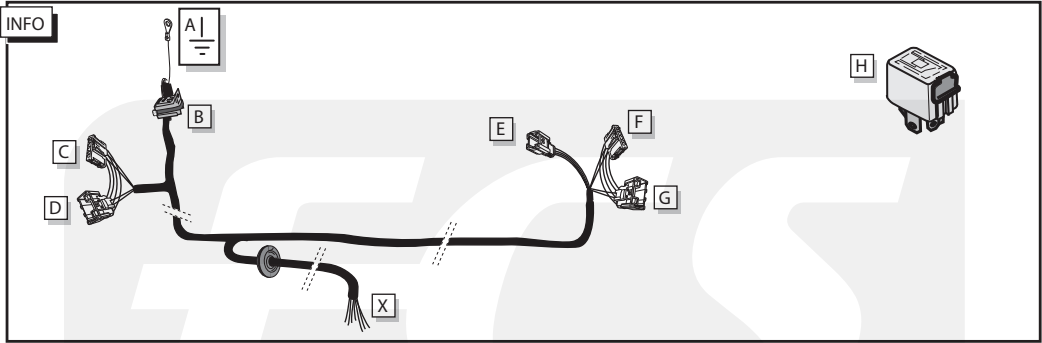

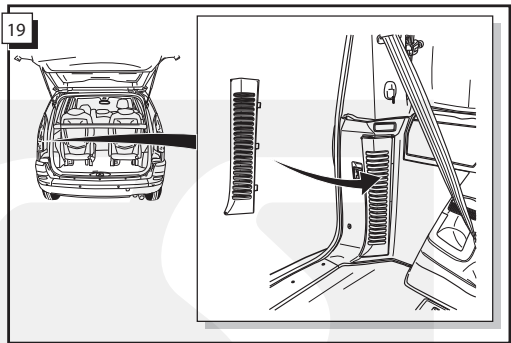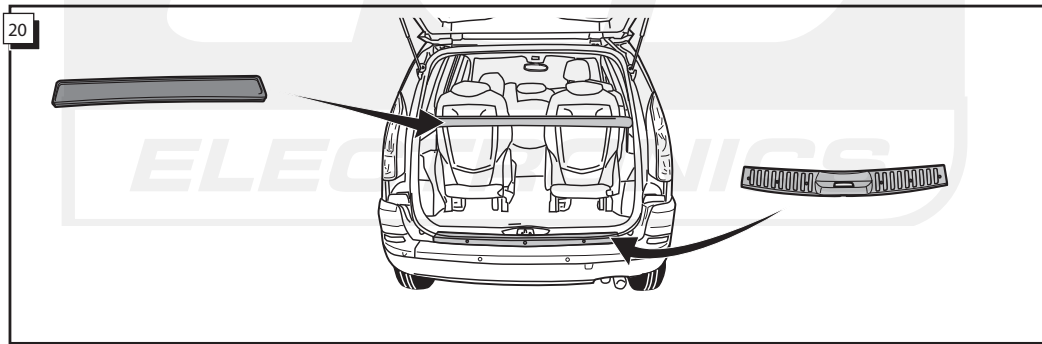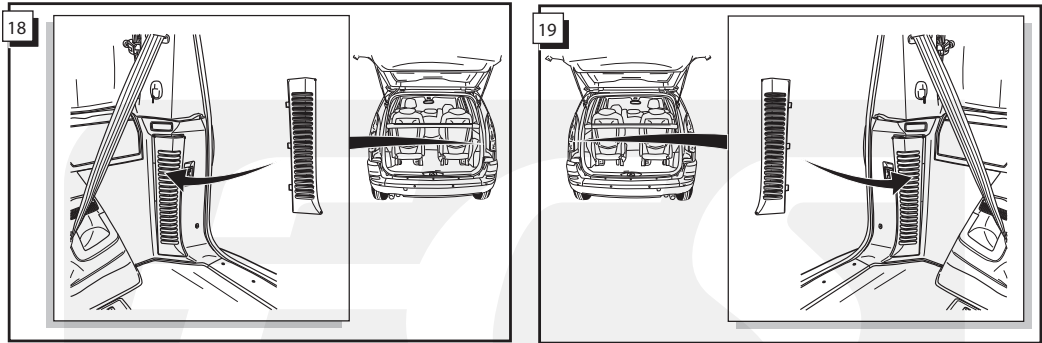

INFO

Anschluss Steckdose / Connection de la prise / Socket connection  
Contactdoos aansluiting / Conexiones del enchufe

DIN/ISO 1724	DE	FR	GB	NL	ES	
↶	1/L	gelb	jaune	yellow	geel	amarillo
⚡	2	blau	bleu	blue	blauw	azul
⏚	3/31	weiß	blanc	white	wit	blanco
↷	4/R	grün	vert	green	groen	verde
☀	5/58-R	braun	marron	brown	bruin	marrón
⊘	6/54	rot	rouge	red	rood	rojo
☀	7/58-L	schwarz	noir	black	zwart	negro
⚡↔⚡	8/58-b	grau	gris	grey	grijs	gris

