




**Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724**

**Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 1724 prise 12-N**


**Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724**

**Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlg. DIN/ISO norm 1724**



**Instrucciones de montaje de
kit eléctrico para enganche de
remolque con caja de conexiones
12-N según norma DIN/ISO 1724**




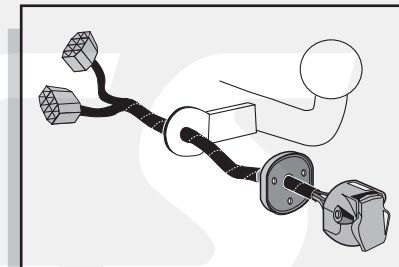


RENAULT CLIO II Ph2 6/2001-

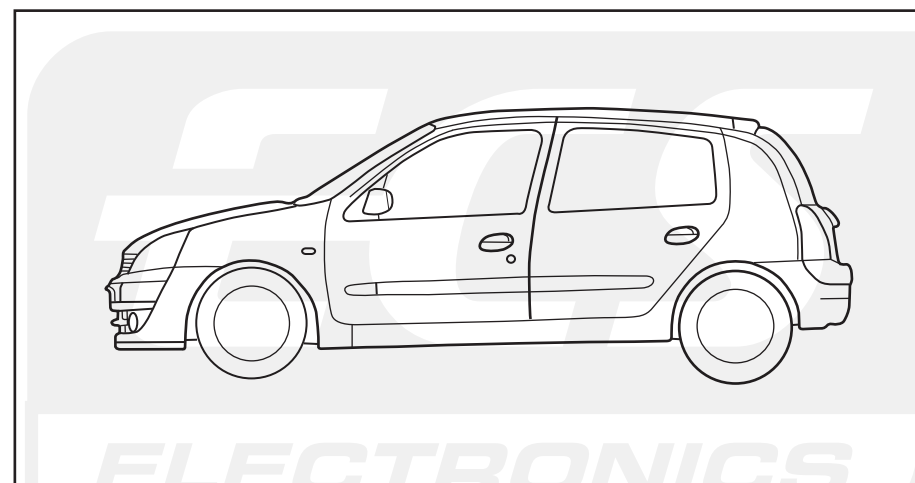


Bestel Nr.: RN-032-BB

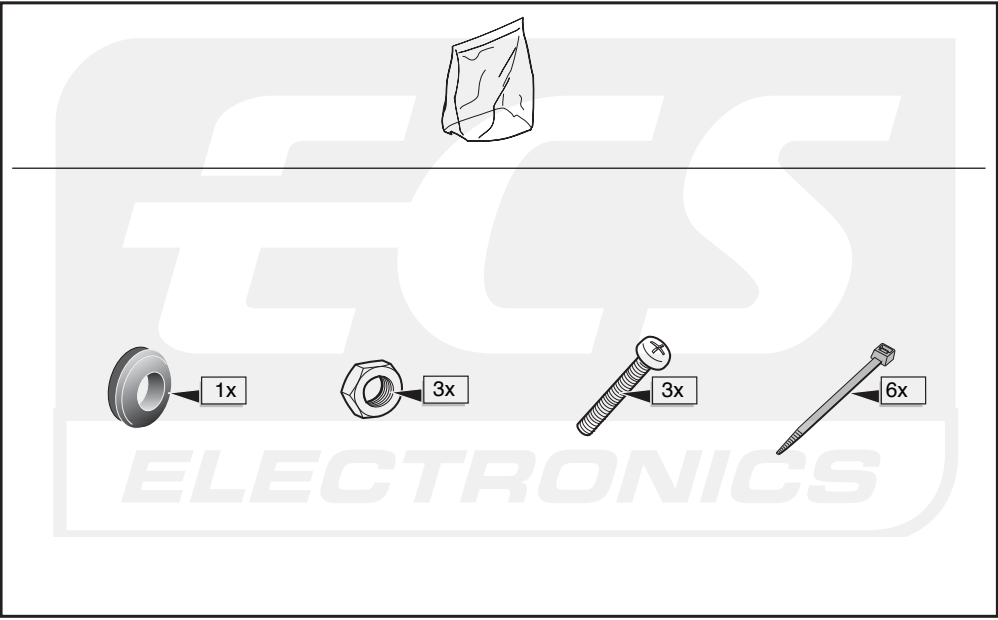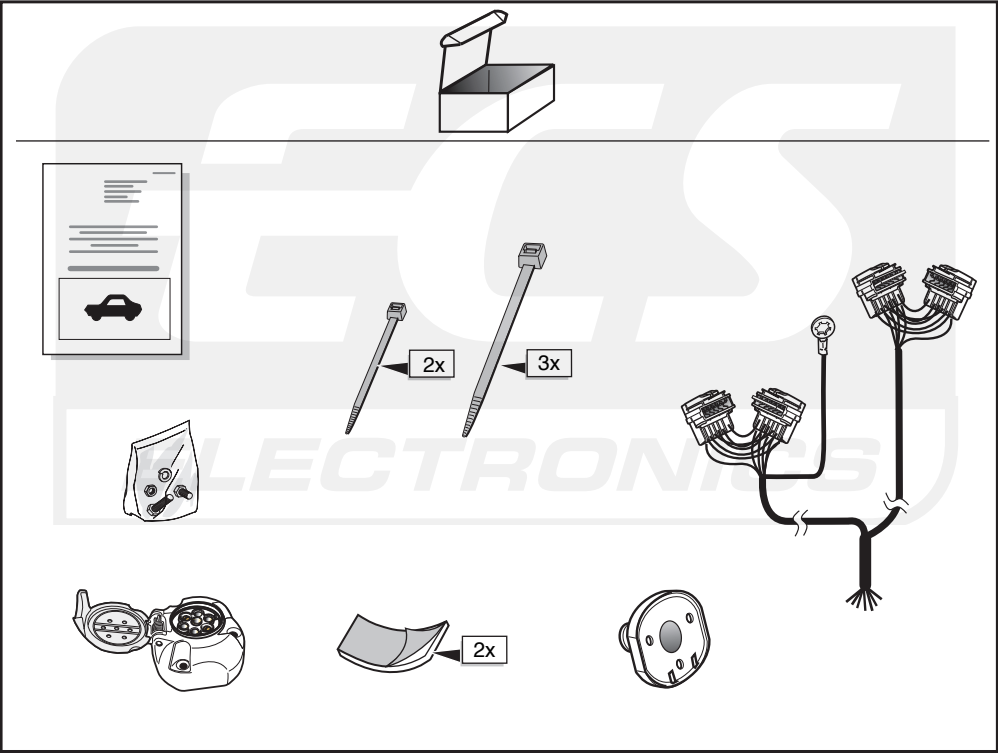


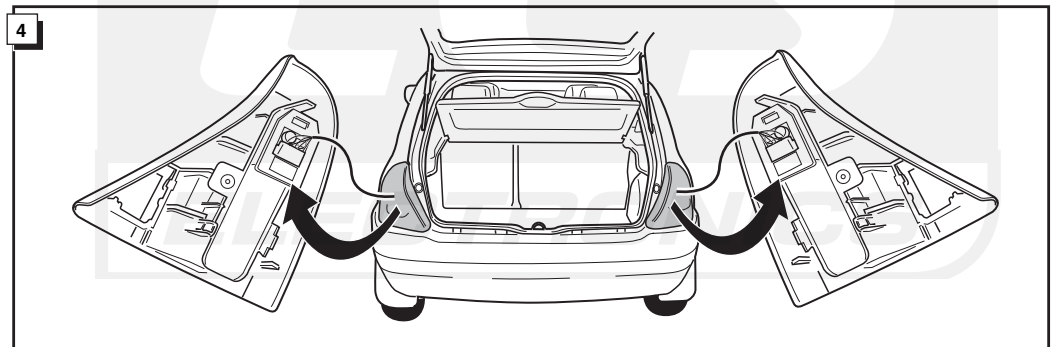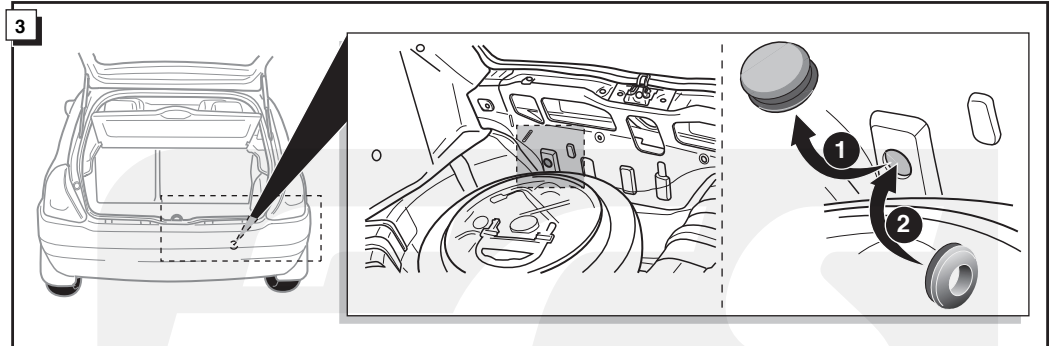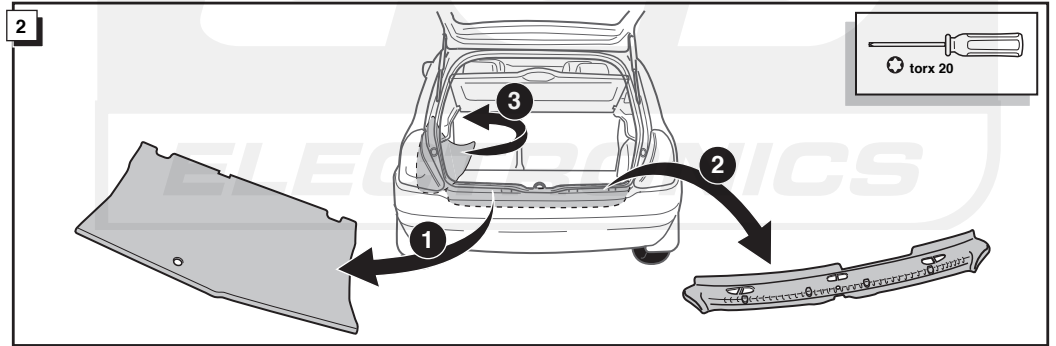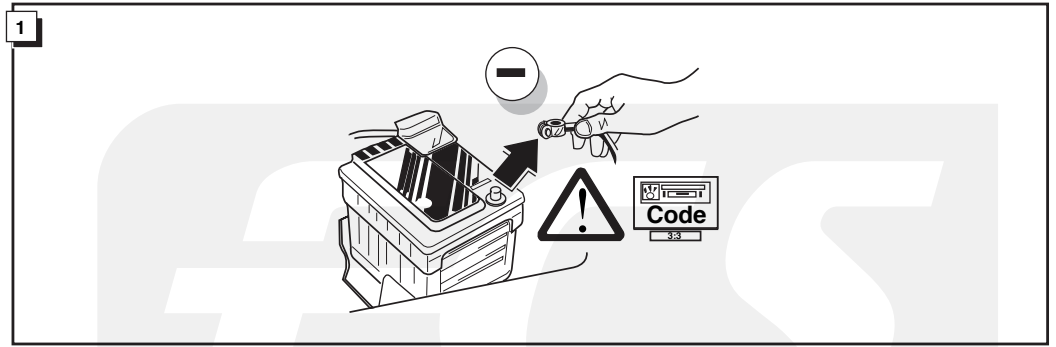


INFO

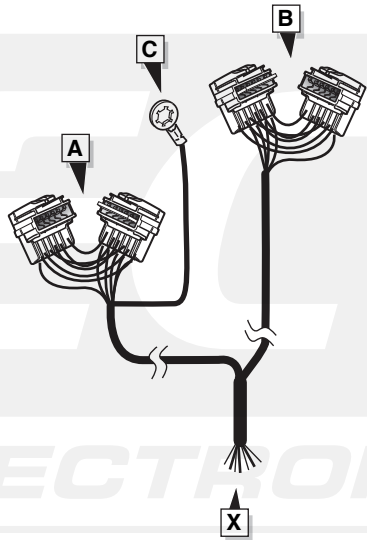

ROUTING

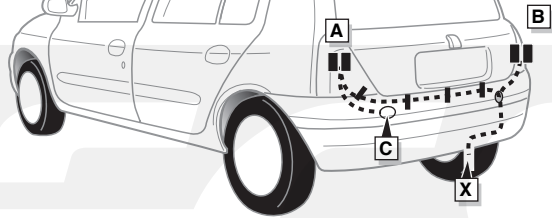

5

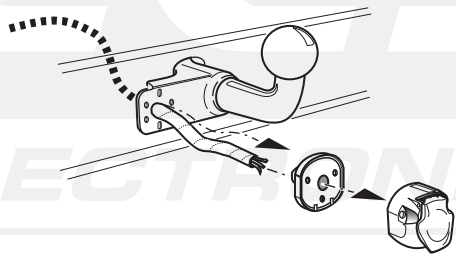




INFO

**Anschluss Steckdose / Connection de la prise / Socket connection
Contactdoos aansluiting / Conexiones del enchufe**


| DIN/ISO 1724 | | DE | FR | GB | NL | ES |
|-----------------|--------|---------|--------|--------|-------|----------|
| | 1/L | gelb | jaune | yellow | geel | amarillo |
| | 2 | blau | bleu | blue | blauw | azul |
| | 3/31 | weiß | blanc | white | wit | blanco |
| | 4/R | grün | vert | green | groen | verde |
| | 5/58-R | braun | marron | brown | bruin | marrón |
| | 6/54 | rot | rouge | red | rood | rojo |
| | 7/58-L | schwarz | noir | black | zwart | negro |
| | 8/58-b | grau | gris | grey | grijs | gris |






6

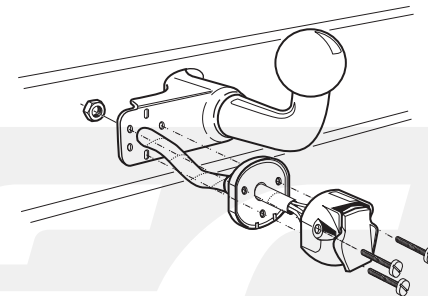

7

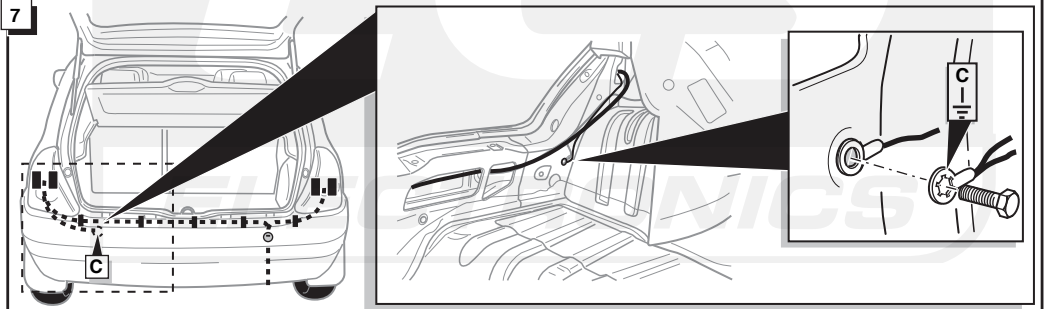

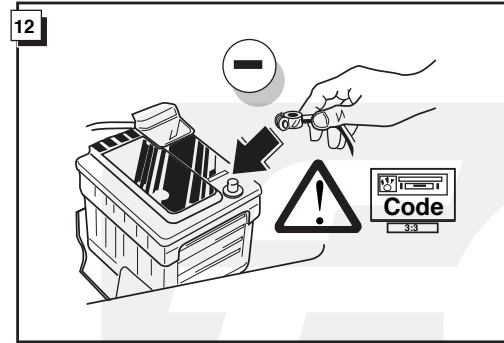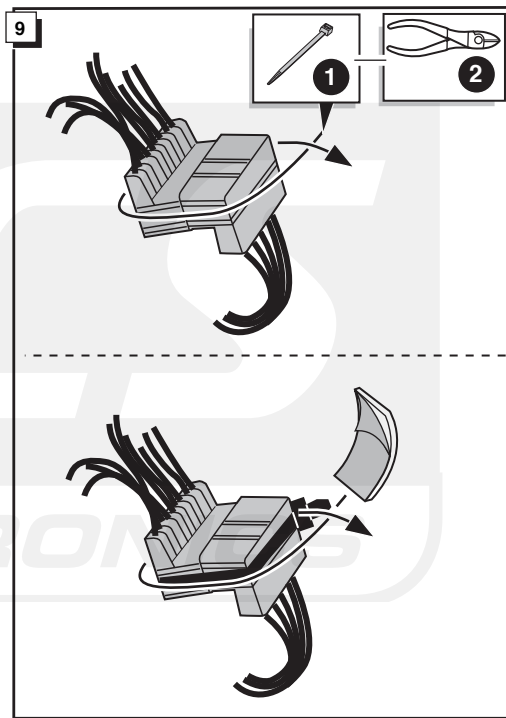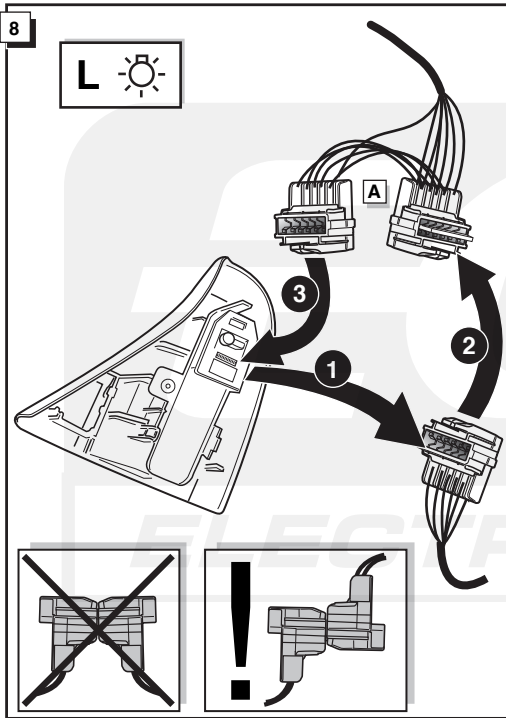

13

! FUNKTIONEN KONTROLLIEREN !
! CONTRÔLER LES FONCTIONS !
! CHECK FUNCTIONS !
! CONTROLER FUNCITIES !
! CONTROLAR LAS FUNCIONES !

